

Activation and registration of SDT270 software (DataDump, Ultranalysis and Updater)

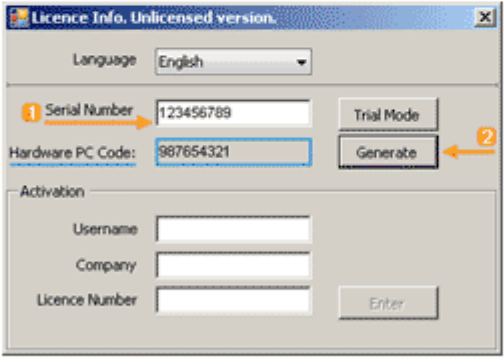
You previously received your serial number by e-mail (if not, please contact your SDT representative) :

Dear John DOE,

The following license has been assigned to you.

Type	Serial No	License No	Assigned to
UAS Dynamic	123456789	not yet activated	My Company, John DOE

Quick guide

1. Install the software on the destination computer.
2. Generate your computer's hardware code:
 - Start the software.
 - The license info form will be automatically opened :
 - There, enter the serial number of your license.
 - ...and click the "Generate" button.
3. Then go to the [license activation page](#) and follow the instructions.

SDT International - www.sdt.be

Standard e-mail of serial number attribution

Click the link in the license e-mail to visit our license activation service (extranet.sdt.eu/licenses/activate). There, follow the instructions to get your license number and activate your license.